

DIS CAN_ manual & EDS_file selector

20190814

Sensor type	Firmware (*)	Manual (**)	EDS-file (**)
Inclination 1-axis 360°	V2.x	V1.x	QG_CANopen safety Dtype_1_axis_360v_v2.x
	v4.x	v4.x	QG_inclination_1_axis_v4.x
	v4B.x	v4B.x	QG_inclination_1_axis_v4B.x
	v5.x	v5.x	QG_inclination_1_axis_v5.x
	v6.x	v6.x	QG_inclination_1_axis_v6.x
Inclination 2-axis (all ranges)	V2.x	V1.x	QG_CANopen safety Dtype_2_axis_v2.x
	v4.x	v4.x	QG_inclination_2_axis_v4.x
	v4B.x	v4B.x	QG_inclination_2_axis_v4B.x
	v5.x	v5.x	QG_inclination_2_axis_v5.x
	v6.x	v6.x	QG_inclination_2_axis_v6.x
Acceleration 2-axis (all ranges)	V2.x	V1.x	QG_CANopen safety Dtype_3_axis_8g_v2.x
	v4.x	v4.x	QG_acceleration_2_axis_v4.x
	v4B.x	v4B.x	QG_acceleration_2_axis_v4B.x
	v6,x	v6,x	QG_acceleration_2_axis_v6.x

(*) Use your regular CAN-tool to read the firmware version out of the sensor

(**) Download the correct file from www.dis-sensors.com