

## QG65N2 Analog Standard accuracy series

QG65N2-KIXv-360-AV3-CM-UL

### Inclination sensor

1 axis vertical mounting

Factory programmable device

Output: 0 - 10 V

Measuring range programmable

between 1° and 360°

Measuring range

Factory default: ±180°



### General specifications 14305, v20241017

Reinforced plastic injection molded (Faradex DS, black, EMI shielded by stainless steel fiber in PC)

60x50x27 mm

Not included: M5 pan head screws. Mounting on flat surface only. Screw with care

IP67, IP69K (with IP69K mating connector)

0 - 95% (non condensing, housing fully potted)

approx. 110 gram

12- 32 V dc

Yes

≤ 25 mA

-40 .. +80 °C

-40 .. +85 °C

Factory default: ±180°

Yes (5 V = 0°), range 360°

0 - 10 Hz

0,2° typ.

± 0,1° typ. (± 0.2° 2σ) after zero adjustment

± 0,15° typ., ±0.2° 2σ, ± 0,25° max.

not applicable. Repeatability 0,1°

0,01°

T>0°C: 0.02°/K typ. en T<0°C: 0.03°/K typ.

10,000g (max 0,2ms, non-repetitive)

0 - 10 V

Rload ≥20kΩ, Cload ≤20 nF

Yes

10 ms

Factory programmable (measuring range, filtering)

### Housing

Dimensions (indicative)

Mounting

Ingress Protection (IEC 60529)

Relative humidity

Weight

Supply voltage

Polarity protection

Current consumption

Operating temperature

Storage temperature

Measuring range

Centering function

Frequency response (-3dB)

Accuracy (overall @20°C)

Offset error

Non linearity

Sensitivity error

Resolution

Temperature coefficient

Max mechanical shock

Output

Output load

Short circuit protection

Output refresh rate


Programming options

## QG65N2-KIXv-360-AV3-CM-UL

$$U_{out} = 5 + 5 \cdot (\alpha/180) \text{ [V]}$$

Zero adjustment: eliminate mech. offsets  
 Connect zero adjustment input to ground (>0,5sec) within 1 min. after power up. Normally this input should be left unconnected or permanent connected to Gnd

### Transfer characteristic

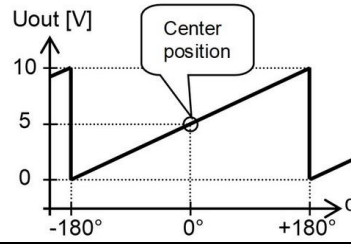

Rotation in vertical plane.

Lateral tilt sensitivity error:  
 $< \pm 0,03^\circ$  lateral tilt (typ.)  
 Max. lateral tilt:  $45^\circ$

Drawn in the default  $0^\circ$  sensor orientation position  
 Zeroing can be done to change the sensor orientation at  $0^\circ$  point

### Measurement orientation




### Connection

Wire / pin coding


### Connectivity (cable length $\pm 10\%$ )

M12 male 5p A-coding connector (Brass Nickel coated, contacts copper alloy)

- Pin 1: + Supply voltage
- Pin 2: For factory use only
- Pin 3: Gnd
- Pin 4: Output X
- Pin 5: Zero adjustment input

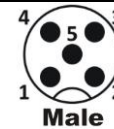

### Mechanical dimensions (indicative only)

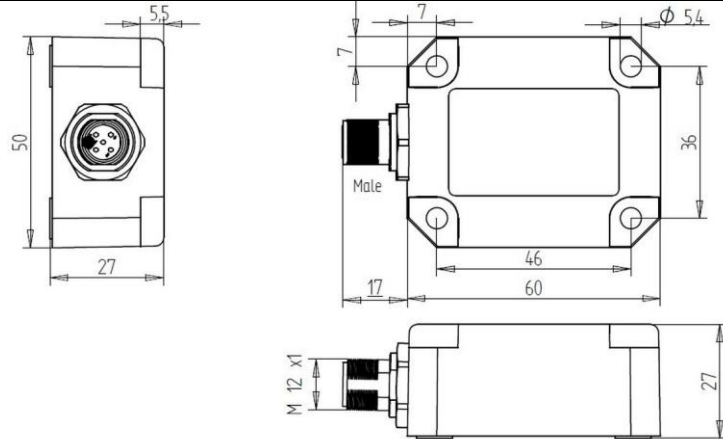

## Remarks, Installation instructions, UL, E4ready

QG series sensors are intended to measure inclination/acceleration/tilt. Flawless function (acc. spec.) is ensured only when used within specifications. This device is not a safety component acc. to EU Machine Directive (ISO13849). For full redundancy two devices can be used. Modifications or non-approved use will result in loss of warranty and void any claims against the manufacturer.

UL & c-UL listed product (File number E312057, UL508 standards UL60947-5-2 & CSA-C22,2 No. 14)  
Product Identity / Category Code Number (CCN): Industrial Control Equipment / NRKH & NRKH7  
Enclosure rating: type 1, Ambient temperature: max 80 °C (see also datasheet, lowest value applies)  
Electrical ratings: Intended to be used with a Class 2 power source in accordance with UL1310,  
max. input Voltage 32V dc (see also datasheet, lowest value applies), max. current 200mA  
Accessory Cable Assembly: Any UL-listed (CYJV/7) mating connector with mechanical locking, wire thickness of at least 30 AWG (0,05 mm<sup>2</sup>), recommended ≤23 AWG (≥0,25 mm<sup>2</sup>)

### Installation instructions:

1. The cable must always be used as a whole (wires may not be separated from each other)
2. For the automotive (non-R10) standards ISO 13766-1 and -2 (earth moving machinery) and ISO 14982 (agricultural), the sensor may not be directly powered from the vehicle's battery.

As this device is accelerometer-based the sensor is inherent sensitive for accelerations/vibrations. Application specific testing must be carried out to check whether this sensor will fulfil your requirements. Before using this device, please read this datasheet, the Manual and the Declaration of Conformity carefully (download from [dis-sensors.com](http://dis-sensors.com))

This product is E4ready and meets Automotive EMC requirements