

DIS CAN_ manual & EDS_file selector

Sensor type	Firmware (*)	Manual (**)	EDS-file (**)
Inclination 1-axis 360°	v4.x	v4.x	QG_inclination_1_axis_v4.x
	v4B.x	v4B.x	QG_inclination_1_axis_v4B.x
	v5.x	v5.x	QG_inclination_1_axis_v5.x
Inclination 2-axis (all ranges)	v4.x	v4.x	QG_inclination_2_axis_v4.x
	v4B.x	v4B.x	QG_inclination_2_axis_v4B.x
	v5.x	v5.x	QG_inclination_2_axis_v5.x
Acceleration 2-axis (all ranges)	v4.x	v4.x	QG_acceleration_2_axis_v4.x
	v4B.x	v4B.x	QG_acceleration_2_axis_v4B.x
	v5.x	v5.x	QG_acceleration_2_axis_v5.x

(*) Use your regular CAN-tool to read the firmware version out of the sensor

(**) Download the correct file from www.dis-sensors.com