

<b>QG40N series configurator 3.0</b>
Configurator
<b>QG40N series configurator 3.0</b>
USB-A
M12 5p female



<b>QG40N series configurator</b>	
Configurator	
Type	
Purpose	
Features	
Connection	
Length	
Data rate	
Material	
Software for Windows	
Temperature range	
Humidity	
Ingress protection	
Installation disk	
Certifications	
UL listed	
Electrical data	
Interface	
External power	
Configurator pins M12 (and wire color)	
Order code	
Manual	
Breakout Box for open wire sensors	

<b>General specifications v20180418</b>	
	For non-permanent usage
	Configurator connection tool & software package
	Configuration of QG40N analog output sensors: Inclinometers, accelerometers and tilt switches
	See manual for details
	USB-A (connect to PC)
	M12 5p female (connect to sensor)
	1,5m to USB & 1.5m to sensor
	USB2.0 (compatible with USB1.1)
	PUR/PP & PVC
	XP, 7, 8, 10: Download from <a href="http://www.dis-sensors.com">www.dis-sensors.com</a>
	+5° ... +40°C
	0-80% RH non-condensing
	IP40
	No, download from <a href="http://www.dis-sensors.com">www.dis-sensors.com</a>
	No
	USB2.0 (compatible with USB1.1)
	Not required, power supply via USB connection
	Pin 1 (brown) : + Supply Voltage
	Pin 2: (white): Y signal
	Pin 3 (blue): Gnd
	Pin 4 (black): X signal
	Pin 5 (green/yellow): Centering
	12380 QG40N series configurator 3.0
	Download from <a href="http://dis-sensors.com">dis-sensors.com</a>
	12345 Breakout cable for QG40N configurator