

QG40N series configurator 3.0
Configurator
QG40N series configurator 3.0
USB-A
M12 5p female



QG40N series configurator	
Configurator	
Type	
Purpose	
Features	
Connection	
Length	
Data rate	
Material	
Software for Windows	
Temperature range	
Humidity	
Ingress protection	
Installation disk	
Certifications	
UL listed	
Electrical data	
Interface	
External power	
Configurator pins M12 (and wire color)	
Order code	
Manual	
Breakout Box for open wire sensors	

General specifications v20180418	
	For non-permanent usage
	Configurator connection tool & software package
	Configuration of QG40N analog output sensors: Inclinometers, accelerometers and tilt switches
	See manual for details
	USB-A (connect to PC)
	M12 5p female (connect to sensor)
	1,5m to USB & 1.5m to sensor
	USB2.0 (compatible with USB1.1)
	PUR/PP & PVC
	XP, 7, 8, 10: Download from www.dis-sensors.com
	+5° ... +40°C
	0-80% RH non-condensing
	IP40
	No, download from www.dis-sensors.com
	No
	USB2.0 (compatible with USB1.1)
	Not required, power supply via USB connection
	Pin 1 (brown) : + Supply Voltage
	Pin 2: (white): Y signal
	Pin 3 (blue): Gnd
	Pin 4 (black): X signal
	Pin 5 (green/yellow): Centering
	12380 QG40N series configurator 3.0
	Download from dis-sensors.com
	12345 Breakout cable for QG40N configurator